

## DVD Overview

### Projection Screen



1. If the screen is powered, locate the switch in the room to lower the screen. If your screen is not powered, manually pull down the screen.



2. Press the **DISPLAY POWER** button on the **console**. Press and hold for about a second to turn on the system. Wait 30 seconds for the projector to warm up. The system is now ready to be used.

3. Press the **DVD** button on the console.

### Operating the DVD Player

- Press the **Power** button on the DVD player.
- Load your disk into the DVD player.
- Press **Play**.

### Adjusting the volume



There is a volume-control knob on the **console** which controls the sound from any **source**.

### Shutting down the room

- Remove the disk from the DVD player.
- To turn off the system, press and hold the **DISPLAY POWER** button for 2 seconds to turn off the system. The light will flash to indicate that the system is powering down. **DO NOT** press any buttons on the **console** while the light is flashing.
- Power off the DVD player.
- Raise the projector screen.
- Turn off the lights.